




TRX250R Louver Instructions

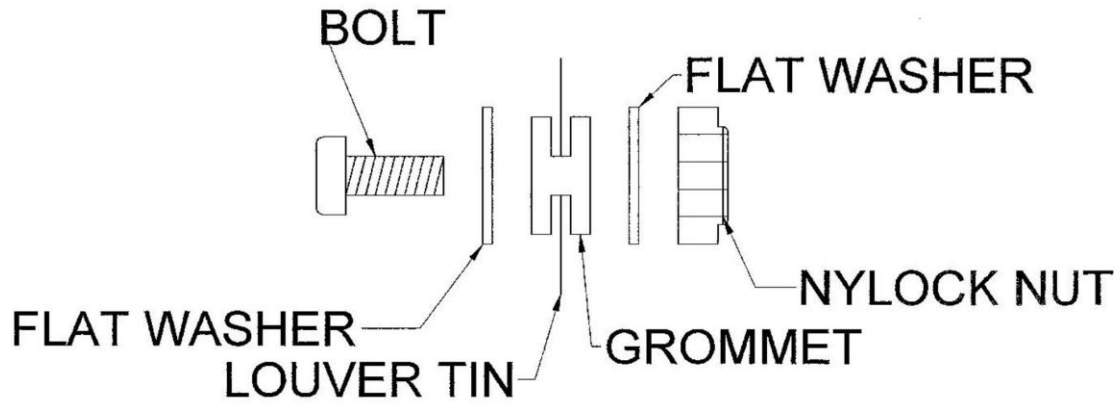

**All bolts enter from the outer sides and the nuts from the inner sides.
Do not over tighten bolt and nut.
Louver assembly bolted in four locations to the factory radiator.**