



Mud Cap Installation Instruction

1. Loosen all beadlock ring bolts.
2. Hold the mud cap in the center of wheel and align the 3 holes with corresponding bolts on the outer beadlock ring.
3. Remove the three bolts you located in step 3 above.
4. Place the nutserted tab between the weld on ring and bolt on clamp ring of the beadlock and replace the bolt removed earlier making sure to go through the large hole in the nutsert tab. **IMPORTANT** The nutserts in the tabs must be flat on the outer side with the nutserts themselves facing in toward the hub.
5. Run all the outer beadlock bolts down finger tight.
6. Place the Mud Cap on the tabs and line up all 3 holes with the 3 nutserts. You may have to rotate the disc till the holes line up.
7. Install the (3) 10-24 button head allen screws and screw them down snug.
8. Tighten the outer beadlock bolts in a cross pattern and torque them down to 10 - 12 Ft. #s.
9. Remove the Mud Cap.
10. Inflate tire.
11. Re-install Mud Cap and tighten screws securely.