


All years YFZ-450 Air Scoops



Upper Mounting Bolt

Cut Line

Scribe Line

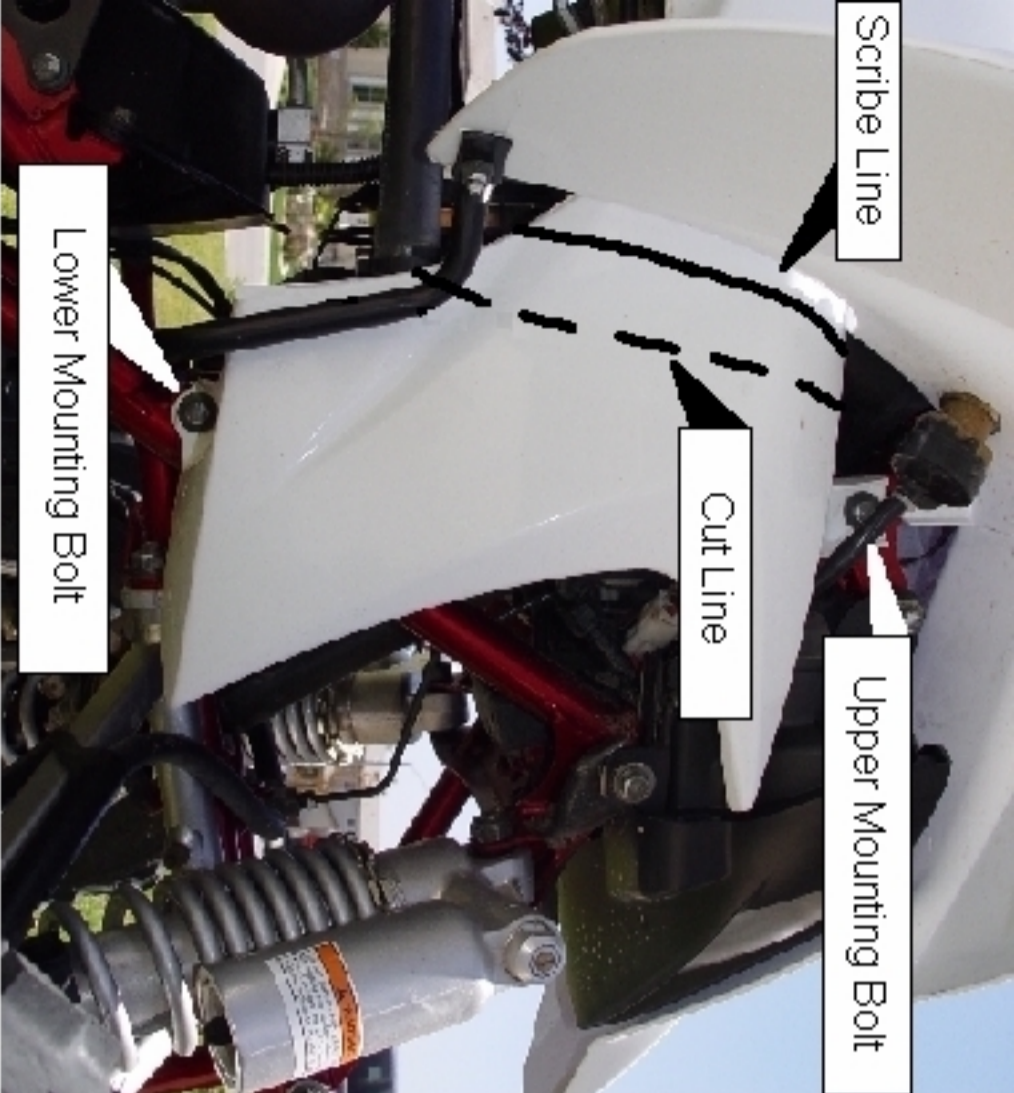

Lower Mounting Bolt

Hardware List:

4 - 6mm X 1.0 X 16mm Bolts	2 - #10 Phillips head Screws
4 - 6mm Flat Washers	4 - #10 Flat Washers
4 - 6mm Split Lock Washers	2 - #10 Nylon Lock Nuts

- 1) Mark factory scoop assembly in front of factory fender along inner fender line with a marker.
- 2) Remove seat and factory scoop / lower tank shroud assembly.
- 3) Cut factory scoop assembly approximately 1/2" forward of marked line as noted in the picture.
- 4) Replace factory lower tank shroud using stock hardware.
- 5) Using the supplied hardware mount the OMF Performance Air Scoop in upper and lower mounting bolt locations as noted in the picture.
- 6) Locate and mark rear mounting screw hole in factory plastic lower tank shroud. Remove the OMF Performance Air Scoop and also the plastic lower tank shroud and drill hole in marked location.
- 7) Repeat steps 4 & 5. Tighten rear mounting screw using the supplied hardware.

Please contact OMF Performance if you have any questions about mounting scoops

Before July 15th, 2004

Phone: (909) 354-8272

Fax: (909) 354-8599

After July 15th, 2004

Phone: (951) 354-8272

Fax: (951) 354-8599



Rear Mounting Screw